

**Toro Groundsmaster 3500D**



PART NO.	DESCRIPTION	REPLACES
1. 100-533	Air Filter	Toro 108-3811
2. 425-536	ATC Fuse (case of 5)	Toro 109355
3. 425-573	ATC Fuse (case of 5)	Toro 218-578
4. 125-336	Fuel Tank Bushing	Toro 46-6560
5. 302-627	Silver Streak Toothed Blade	Toro 107-0235-03
6. 355-100	Medium-Lift Blade	Toro 104-5183
7. 345-190	Combination Blade	Toro 108-9026-03
8. 120-710	Transmission Filter	Toro 86-3010
9. 430-334	Indak Ignition Switch	Toro 104-2541
10. 430-401	Delta PTO Switch	Toro 95-4108
11. 430-457	Delta Seat Switch	Toro 92-6282
12. 175-505	Valve Stem #412	Toro 5108